




Removing the Logitech MBJ58 Scroll Wheel from its Mount

Removing the scroll wheel from the wheel mount will allow you to access the resistance spring.

Written By: Conor Whatley

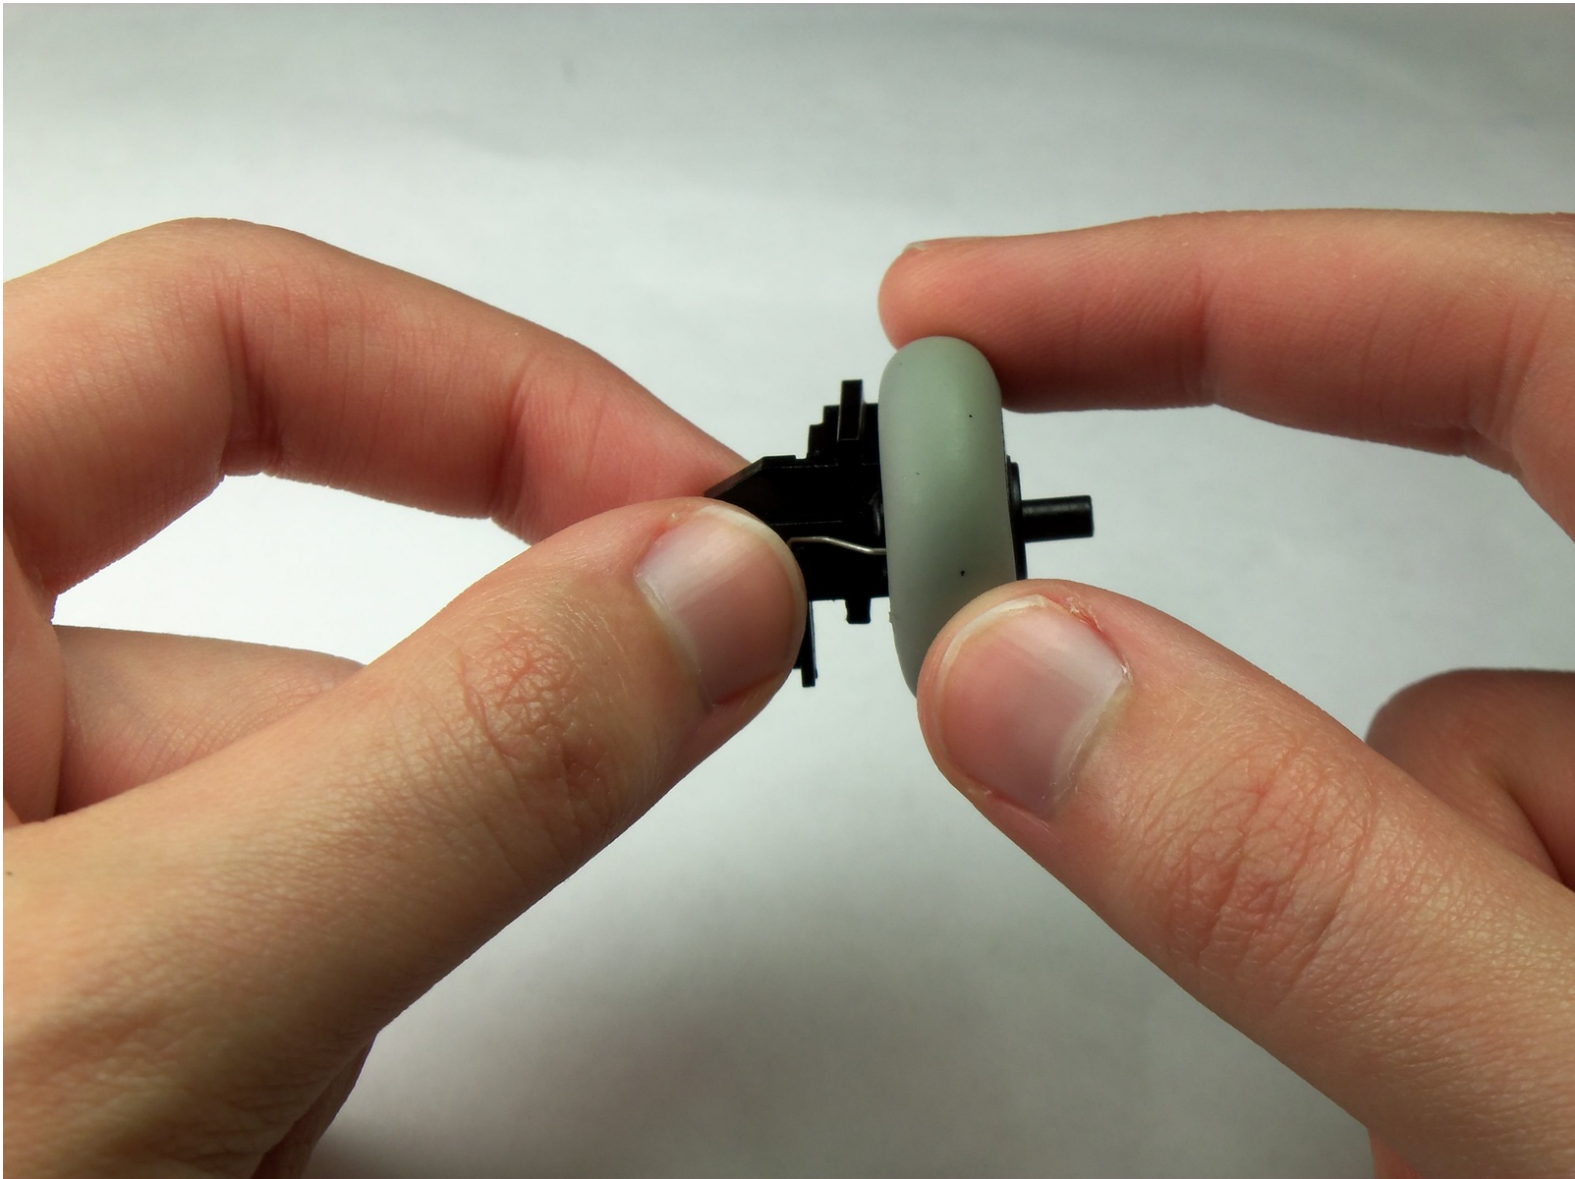

INTRODUCTION

You will learn how to remove scroll wheel from the wheel mount.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top cover






- Remove the 4.76 mm Phillips #1 screw.

Step 2




- Lift up the top of the mouse and pull the cover off.

Step 3 — Scroll Wheel

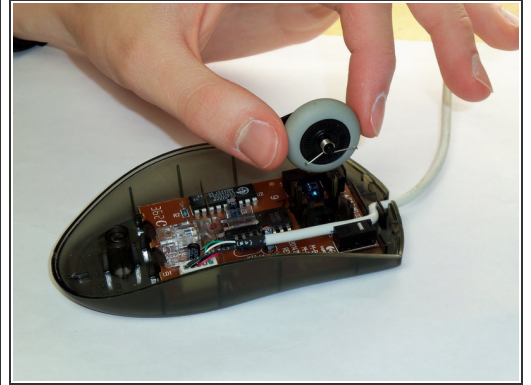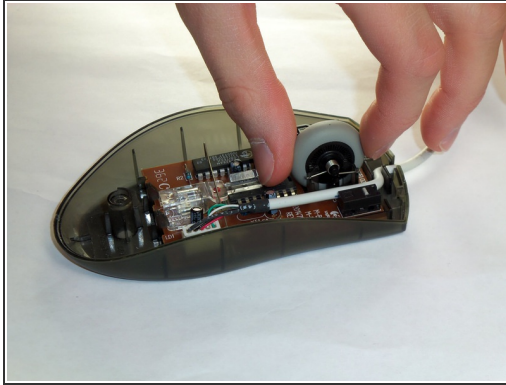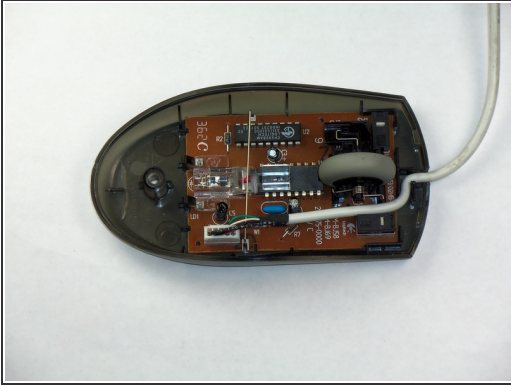



- Gently take the scroll wheel and remove it from the mouse.

Step 4 — Support Spring

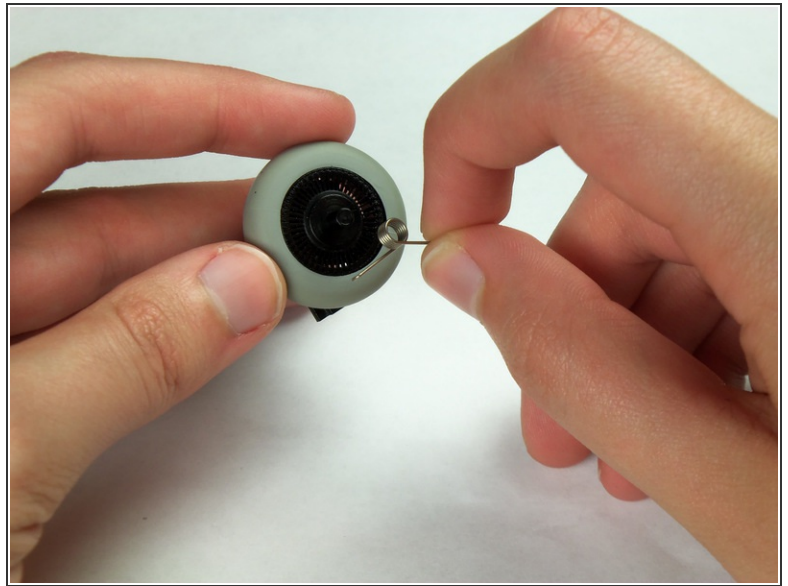

- Carefully slide the support spring off the scroll wheel.



Step 5 — Attaching the New Spring

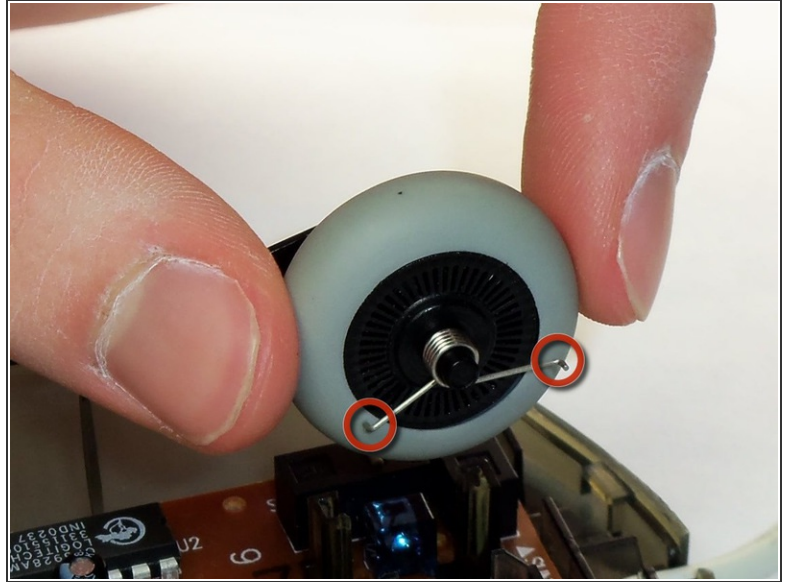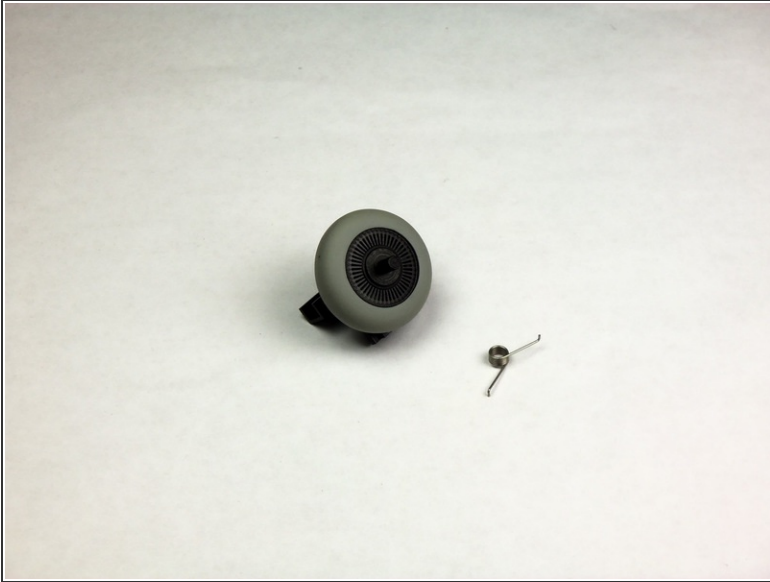

- Replace the spring making sure it is placed on the right side of the wheel with the prongs pointing down.

i The right side is the side without the black plastic square as shown in the photos.

Step 6 — Wheel Mount

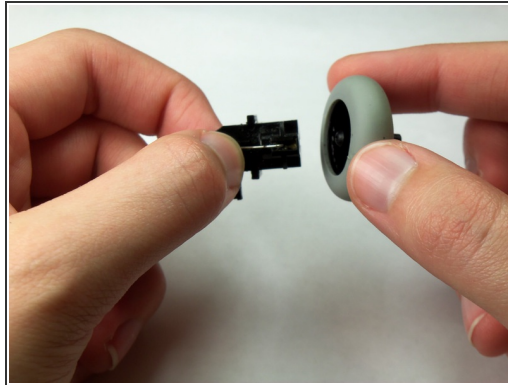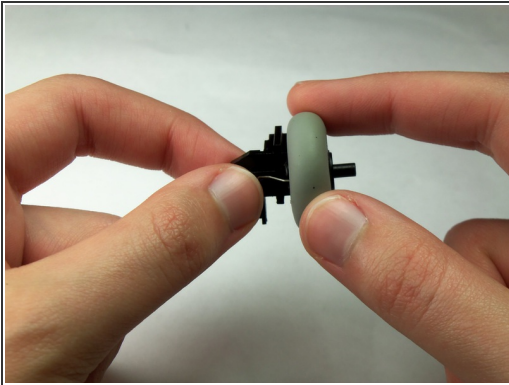

- Locate the black wheel mount.

i Note: Make sure that the spring hidden in the mount does not fall out.

- Separate the wheel from its mount.

To reassemble your device, follow these instructions in reverse order.

